

# ***Energizer®***



## **Step ③**

---

### **Smart Video Doorbell**


EOD1-1001-SIL

## **WIRELESS CHIME SETUP GUIDE**

**v1.2**

# Use this guide to finalize setup of your Wireless Chime.
 
## Wireless Chime Features

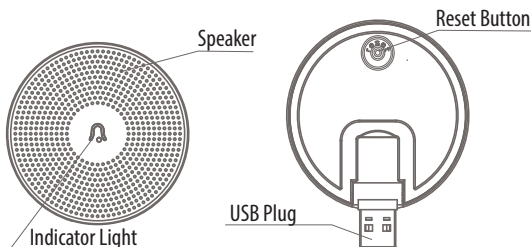




| System Specifications |  |
|-----------------------|--|
| Power                 | DC 5V, USB power supply  |
| Reset Button          | Click the Reset Button to put the Wireless Chime in pairing mode.<br>Press and hold the Reset Button for 5 seconds to restore the Wireless Chime to factory settings. It will blink quickly to confirm that the Wireless Chime has been reset. |
| Indicator Light       | Blue light blinking: Wireless Chime is in Pairing Mode<br>Blue solid light: Paired to Smart Security Doorbell  |

©2019 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Jem Connected IOT, Inc. All other brand names are trademarks of their respective owners. Neither Jem Connected IOT, Inc. nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.

1

First, make sure your doorbell's Chime Setting is set to "Wireless Chime".

   You can set this when accessing your doorbell for the first time, or later in your doorbell's settings.

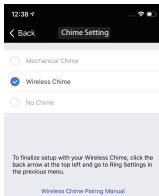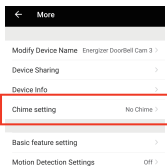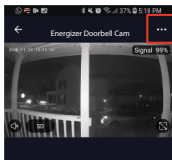

2

Plug your Wireless Chime into a wall outlet using the included USB Power Adapter.

NOTE: Wireless Chime should be plugged into a wall outlet within 30ft of doorbell.

3

Click the Reset Button on the back of the Wireless Chime. The Indicator Light should start blinking.



**Energizer**



  2

Go to Ring settings within the device settings of the doorbell. Click the "Add" button.

The light on the Wireless Chime should stop blinking. Your Wireless Chime is now paired to your doorbell.

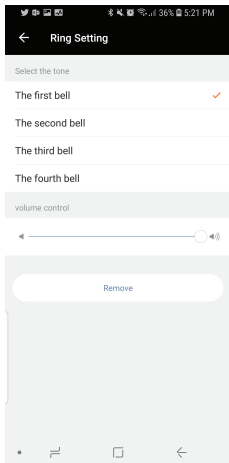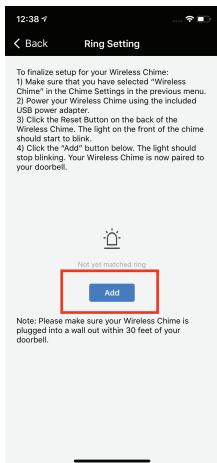

NOTE: You can choose ring tone sound and volume.