

# ***Energizer®***

TM

The logo consists of the word "CONNECT" in a bold, sans-serif font, centered within a horizontal oval. The oval has a metallic, brushed-metal texture with a slight gradient and a dark border.

**CONNECT**

## **Smart Outdoor Plug**

**EOX3-1001**

---

 
# **QUICK START GUIDE**

**V1.1**

Thank you for choosing the **Energizer® Smart Outdoor Plug**. This quick start guide will help you with setup and installation.

## Package Includes:

- 1 – Smart Outdoor Plug
- 1 – Quick Start Guide

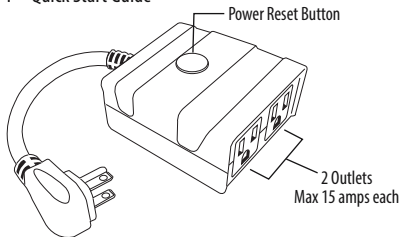

**Note:** **Energizer® Connect devices only work on a 2.4ghz WiFi network.**

©2019 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Jem Connected IOT, Inc. All other brand names are trademarks of their respective owners. Neither Jem Connected IOT, Inc. nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App store is a service mark of Apple Inc.

Google and Google Play are trademarks of Google LLC. All rights reserved.


Amazon Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

# Pair the Smart Outdoor Plug

1

Download the **Energizer®** Connect app from the App Store (for iPhones) or Google Play Store (for Android phones).

 Before opening the app, make sure your phone is connected to the WiFi network that your Smart Outdoor Plug will be placed on.

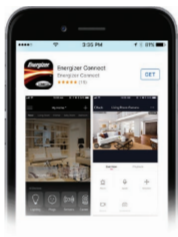

Download on the  
**App Store**




GET IT ON  
**Google Play**

# **Energizer®**



 2

Open the app and create an account by following the on-screen instructions.

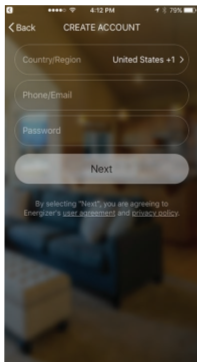

**Energizer**



 
2



Plug the Smart Outdoor Plug into a wall outlet .



*Note: The Smart Outdoor Plug is not suitable for appliances or machinery that requires more than 15 amps (per outlet). Please check the device's electrical requirements before plugging in.*

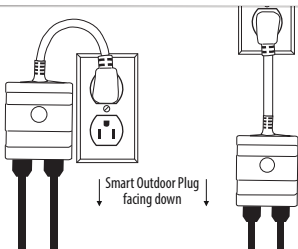

*Note: The indicator light on the plug should start blinking rapidly (about 4 times per second) for EZ pairing mode.*



AP MODE	Rapidly blinking (about 4 times per second)
EZ MODE	Slowly blinking (about 2 times per second)

## Installation



  *Note: In order to maintain raintight rating the Smart Outdoor Plug must be mounted with the outlets facing down and be at least 55" (1.4m) above ground level.*

- Do not place flat on the ground.
- Do not submerge or place in water.
- Do not mount with the outlets facing up.





**Energizer**



4

  After logging in, click “+” on the top right of the screen and select “Add Device”.

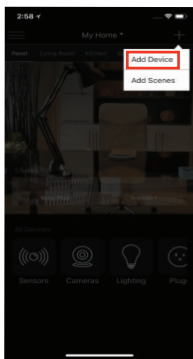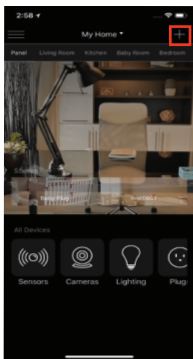


***Energizer***



5

## 5-6

 Select "Plug".

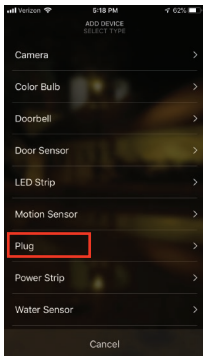

Confirm that the indicator light is rapidly blinking, then click next.

**Energizer**

 
 


7

Confirm that the network WiFi displayed is your 2.4ghz WiFi network, enter your WiFi password and click confirm.



Your Smart Outdoor Plug will now be connected to the network. Confirm the settings for your device and then click Finish Device Setup.

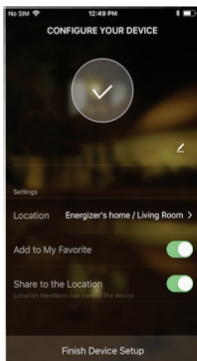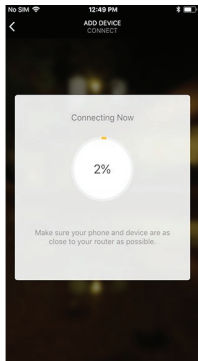

Your **Energizer**® Smart Outdoor Plug is now ready to use. You can now set schedules, timers and control your Smart Plug remotely. We hope you enjoy using your **Energizer**® Smart Outdoor Plug. For frequently asked questions and instruction videos, please visit our website at [www.energizerconnect.com](http://www.energizerconnect.com).

**Energizer**®




To enable voice access for your Smart Outdoor Plug, you will need to link the **Energizer® Connect** skill with your choice of voice assistant.

## Voice Activation for Alexa

 
Make sure your Alexa device is installed and set up first.

1 Open your Alexa app.

2 Open the menu to search for Skills.

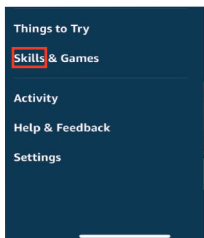

 3 Search for & choose **Energizer® Connect**.

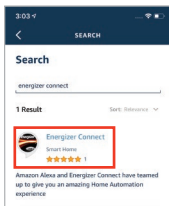

4 Authorize your account with the Alexa skill using the username and password from your **Energizer® Connect** app.

5 Using the name you assigned your plug, you can ask Alexa to turn on/off your equipment.  
Ex: "Alexa, turn on outdoor plug".


# Energizer®



 
# Voice Activation for the Google Assistant

Make sure your Google Assistant device is installed and set up first.

- 1 Open your Google Home app.
- 2 Click the + to add a new device
- 3 Click "Set up a device"

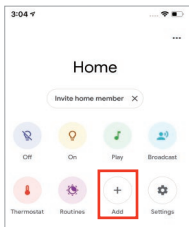

 - 4 Click "Have something already set up?"
- 5 Search for & choose **Energizer® Connect**.

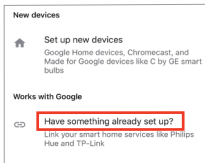

- 6 Authorize your account with the Google Assistant skill using the username and password from your **Energizer® Connect** app.
- 7 Using the name you assigned your plug, you can ask the Google Assistant to turn on/off your appliances.  
Ex: "Ok Google, turn on outdoor plug".



## Troubleshooting

If you need to reset or troubleshoot your Smart Outdoor Plug, simply hold down on the power/reset button for 5-10 seconds.

### Pairing Modes:

**EZ mode:** The device's light is rapidly blinking for easy, quick pairing setup.

**AP Mode:** Access Point mode is a secondary setup process in which the device's indicator light is slowly blinking and requires multiple steps for pairing. Follow the on-screen step by step instructions.



## FCC Compliance

This device complies with Part 15 of the FCC. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF Exposure Statement

To satisfy FCC's RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.